



# How to...

## Use Teac LP-R550USB to create CD.

1. Turn on Teac machine.
2. Press Phono/Tape/Aux button to the select source to be recorded.
3. Load CD-R or CD-RW disc. Make sure "NO TOC" and "CD R" (or "CD-RW") displays.
4. Select "Auto Rec" by pressing the Manual/Auto Rec button. Select -40 db.
5. Press record button. The red indicator light should be blinking. This means the unit is in record pause mode.
6. Play the source and adjust the recording level so that the loudest sounds do not exceed the "over" indicator.
7. Move tone arm to edge of record or press play for cassette.
8. Press play/pause to start recording. Red light should be solid.
9. To pause recording, when switching out cassette or to put on another record, press play/pause again.
10. The CD must be finalized for it to play on a CD player. To finalize: press CD, press finalize, press enter. Finalizing takes a few minutes.